
## Type VN

Fits inside the re-entrant channel of several composite floor decking profiles including AMDECK<sup>®</sup> 54, R51+<sup>™</sup>, ComFlor<sup>®</sup> 51+, Holorib, Superib, Multideck MD50 and MetFloor<sup>®</sup> 55.

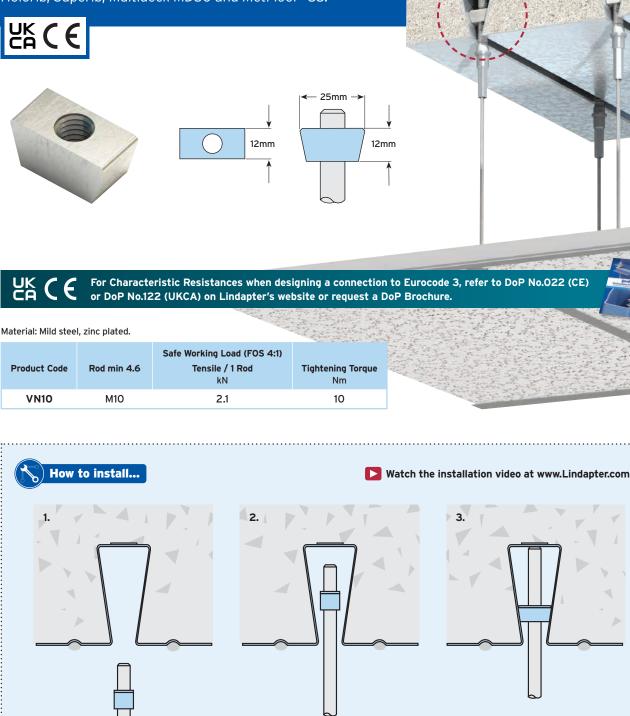

1) Screw the V-Nut (VN) onto the threaded rod.

- 2) Insert VN and rod into the decking channel.
- Rotate rod and VN through 90° so that the tapered edges engage the side of the re-entrant channel.

+44 (0) 1274 521444

Install the decking fixings after the concrete has been poured and has reached full strength.

www.Lindapter.com

C Lindapter International 2023


If the decking profile is deformed or distorted, do not install the fixing. If in doubt, contact the Technical Support team for advice.

Ref: LindUKAug23

lindapter

## **Decking Fixings**

High quality, cost effective connections for securing building services. Designed to fit inside the dovetail re-entrant channels of popular composite decking profiles, Lindapter's fixings provide a zero-impact method that avoids delamination and damage to the decking.

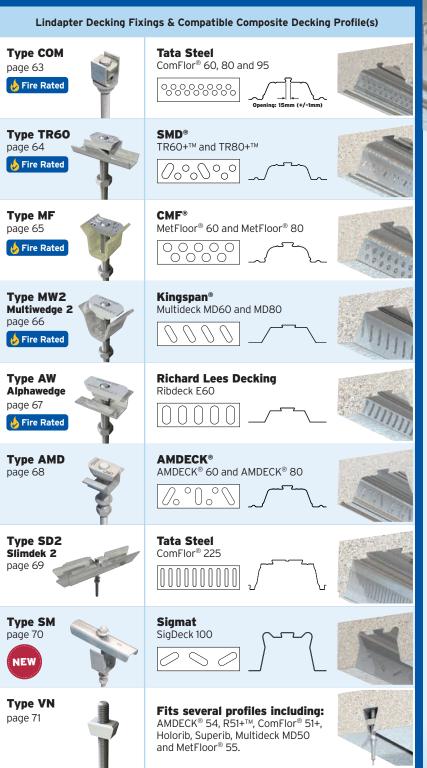

lindapter<sup>®</sup> C +44 (0) 1274 521444



C Lindapter International 2023

Ref: LindUKAug23

www.Lindapter.com